



AIRCRAFT MAINTENANCE MANUAL

OVENS - REMOVAL/INSTALLATION

EFFECTIVITY: AIRCRAFT WITH OVEN

1. General

- A. This section gives the procedure to remove/install the ovens and oven controllers.
- B. The ovens and oven controllers are installed in the outboard galley, zone 232.
- C. The procedures in this section are given in the sequence below. The tasks identified with (♦) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
25-31-03-000-801-A	OVENS AND OVEN CONTROLLERS - RE- MOVAL	AIRCRAFT WITH OVEN
25-31-03-400-801-A	OVENS AND OVEN CONTROLLERS - IN- STALLATION	AIRCRAFT WITH OVEN



AIRCRAFT
MAINTENANCE MANUAL

TASK 25-31-03-000-801-A

EFFECTIVITY: AIRCRAFT WITH OVEN

2. OVENS AND OVEN CONTROLLERS - REMOVAL

A. General

- (1) This task gives the procedures to remove the ovens and oven controllers.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

H. Preparation

SUBTASK 841-003-A

- (1) Make sure that the aircraft is safe for maintenance.
- (2) Make sure that the SHED BUSES rotary switch, on the electrical panel of the overhead panel, is set to the OFF position and attach a DO-NOT-SET-AUTO tag to it.
- (3) Make sure that the ovens are empty and with its door locked.
- (4) Remove the trolleys.


I. Removal (Figure 401)

SUBTASK 020-003-A

- (1) Release the ovens (1) from the outboard galley as follows:
 - (a) Remove the screws (2) for each oven (1).
 - (b) Pull the oven (1) carefully to disconnect it from the electrical connector (3).
- (2) Release the oven controllers (4) from the outboard galley as follows:

NOTE: If you want to remove only the oven controllers (4), you must remove the oven (1) installed below them.

 - (a) Remove the screws (5) for each oven controllers (4).

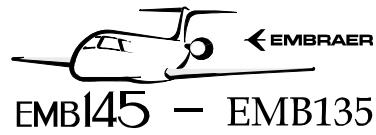


AIRCRAFT
MAINTENANCE MANUAL

- (b) Pull the oven controller (4) carefully to disconnect it from the electrical connector (6).

EFFECTIVITY: AIRCRAFT WITH OVEN

Ovens and Oven Controllers - Removal/Installation

Figure 401

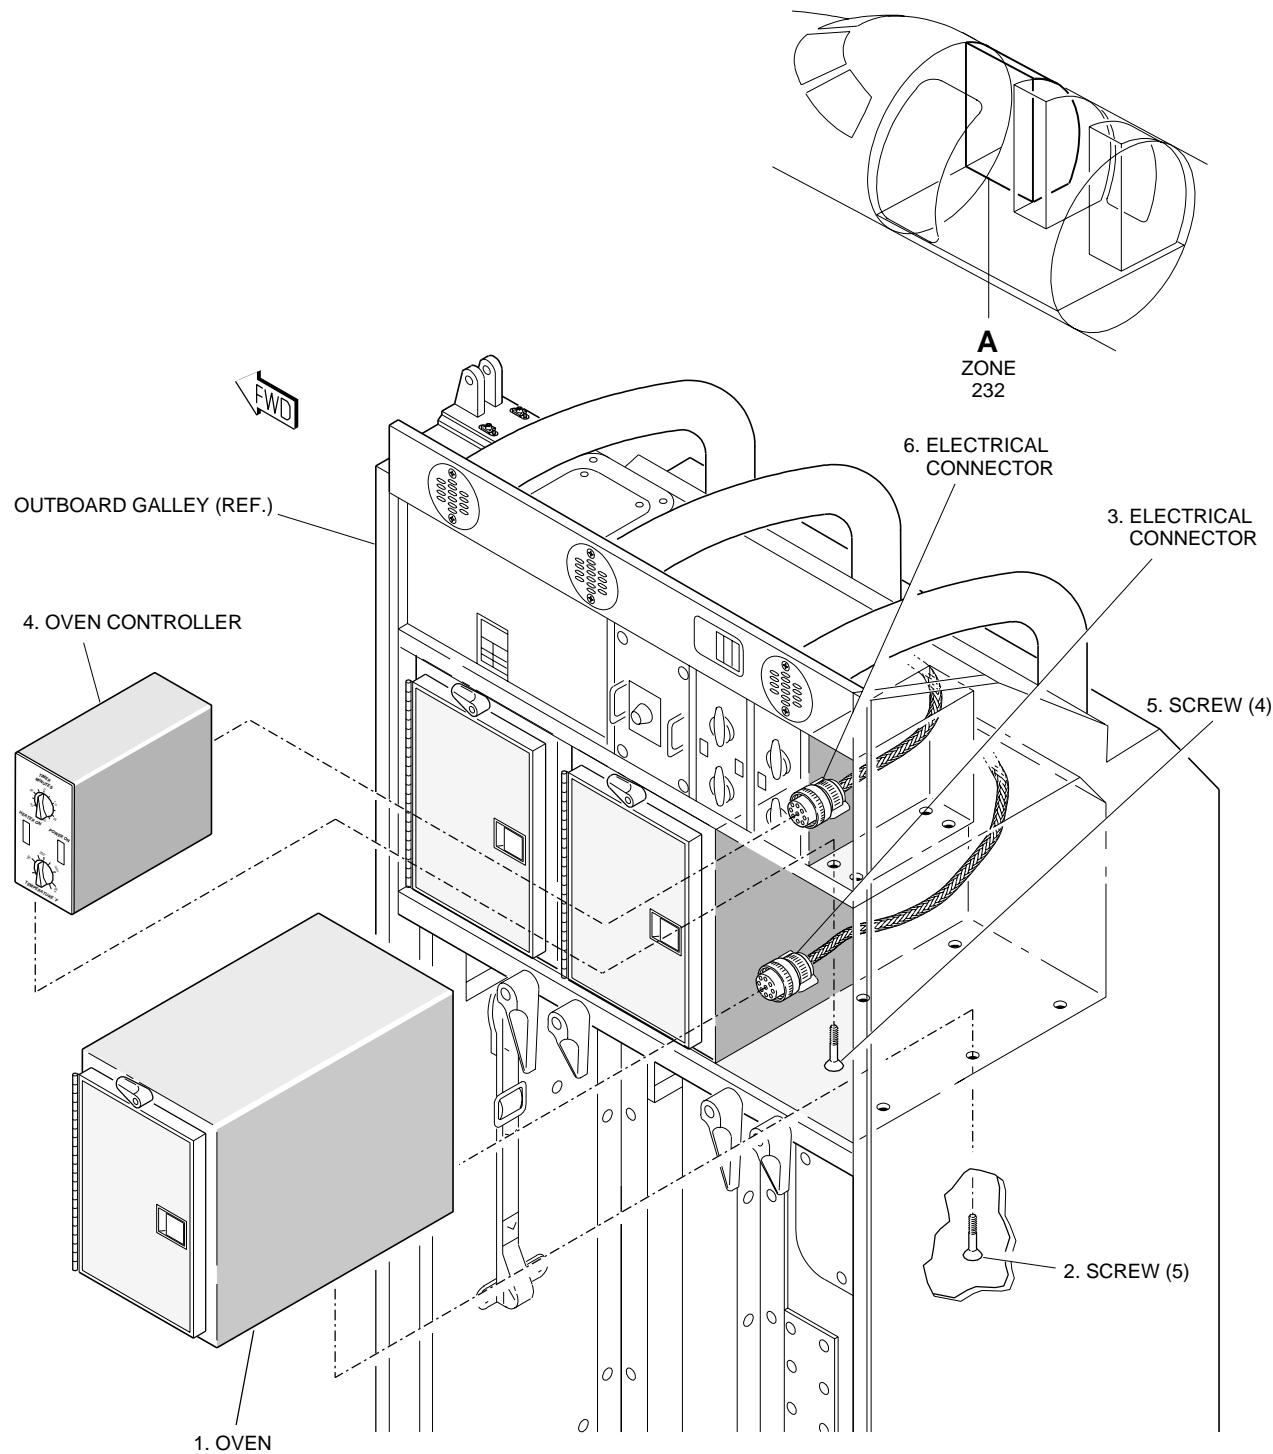

145AMM250393.MCE



TASK 25-31-03-400-801-A

EFFECTIVITY: AIRCRAFT WITH OVEN

3. OVENS AND OVEN CONTROLLERS - INSTALLATION

A. General

- (1) This task gives the procedures to install the ovens and oven controllers.

B. Zones and Accesses

Not Applicable

C. Tools and Equipment

Not Applicable

D. Auxiliary Items

Not Applicable

E. Consumable Materials

Not Applicable

F. Expandable Parts

Not Applicable

G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

H. Installation (Figure 401)

SUBTASK 420-003-A

- (1) Attach the oven controllers (4) to the outboard galley as follows:

- (a) Connect the electrical connector (6).
(b) Install the screws (5).

- (2) Attach the ovens (1) to the outboard galley as follows:

- (a) Connect the electrical connector (3).
(b) Install the screws (2).

I. Follow-on

SUBTASK 842-003-A

- (1) On the electrical panel, of the overhead panel, set the SHED BUSES rotary switch to the AUTO position and remove the DO-NOT-SET-AUTO tag from it.
(2) Install the trolleys on its original position.

