

## CABINET BASEPLATE - REMOVAL/INSTALLATION

*EFFECTIVITY: AIRCRAFT WITH MEDEVAC CONFIGURATION*

### 1. General

- A. This section gives the procedures to remove/install the cabinet baseplate.
- B. The cabinet baseplate is installed in zone 242.
- C. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
25-28-62-000-801-A	CABINET BASEPLATE - REMOVAL	AIRCRAFT WITH ME-DEVAC CONFIGURATION
25-28-62-400-801-A	CABINET BASEPLATE - INSTALLATION	AIRCRAFT WITH ME-DEVAC CONFIGURATION

TASK 25-28-62-000-801-A

*EFFECTIVITY: AIRCRAFT WITH MEDEVAC CONFIGURATION*

## 2. CABINET BASEPLATE - REMOVAL

### A. General

(1) This task gives the instructions to remove the cabinet baseplate.

### B. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
242		Passenger cabin

### C. Tools and Equipment

Not Applicable

### D. Auxiliary Items

Not Applicable

### E. Consumable Materials

Not Applicable

### F. Expandable Parts

Not Applicable

### G. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

### H. Preparation

*SUBTASK 841-003-A*

(1) Make sure that the aircraft is safe for maintenance.

### I. Removal (Figure 401)

*SUBTASK 020-003-A*

(1) Remove the cabinet baseplate as follows:

**NOTE:** Before the removal, identify the location of each cabinet baseplate to make sure that it is installed back in the same position as that from which it was removed.


- (a) Remove the track lining sections (9) as applicable.
- (b) Loosen the bolts (4), lock washers (3), washers (2), inner bushings (5), outer bushings (6), and galley fittings (7) that attach the cabinet baseplate (1) to the lateral track (8).
- (c) Loosen the lock washers (17), washers (16), inner bushings (15), outer bushings (14), washers (13), retainers (12), and the studs (11) that attach the cabinet baseplate (1) to the floor track (10).

- (d) Move the cabinet baseplate (1) horizontally to a position where the tracks align with the larger openings of the track slot.
- (e) Pull up the cabinet baseplate (1) to remove it.
- (f) Remove the galley fittings (7) from the lateral track (8).
- (g) Remove the retainers (12) and stud (11) from the floor track (10).

EFFECTIVITY: AIRCRAFT WITH MEDEVAC CONFIGURATION

Cabinet Baseplate - Removal/Installation

Figure 401

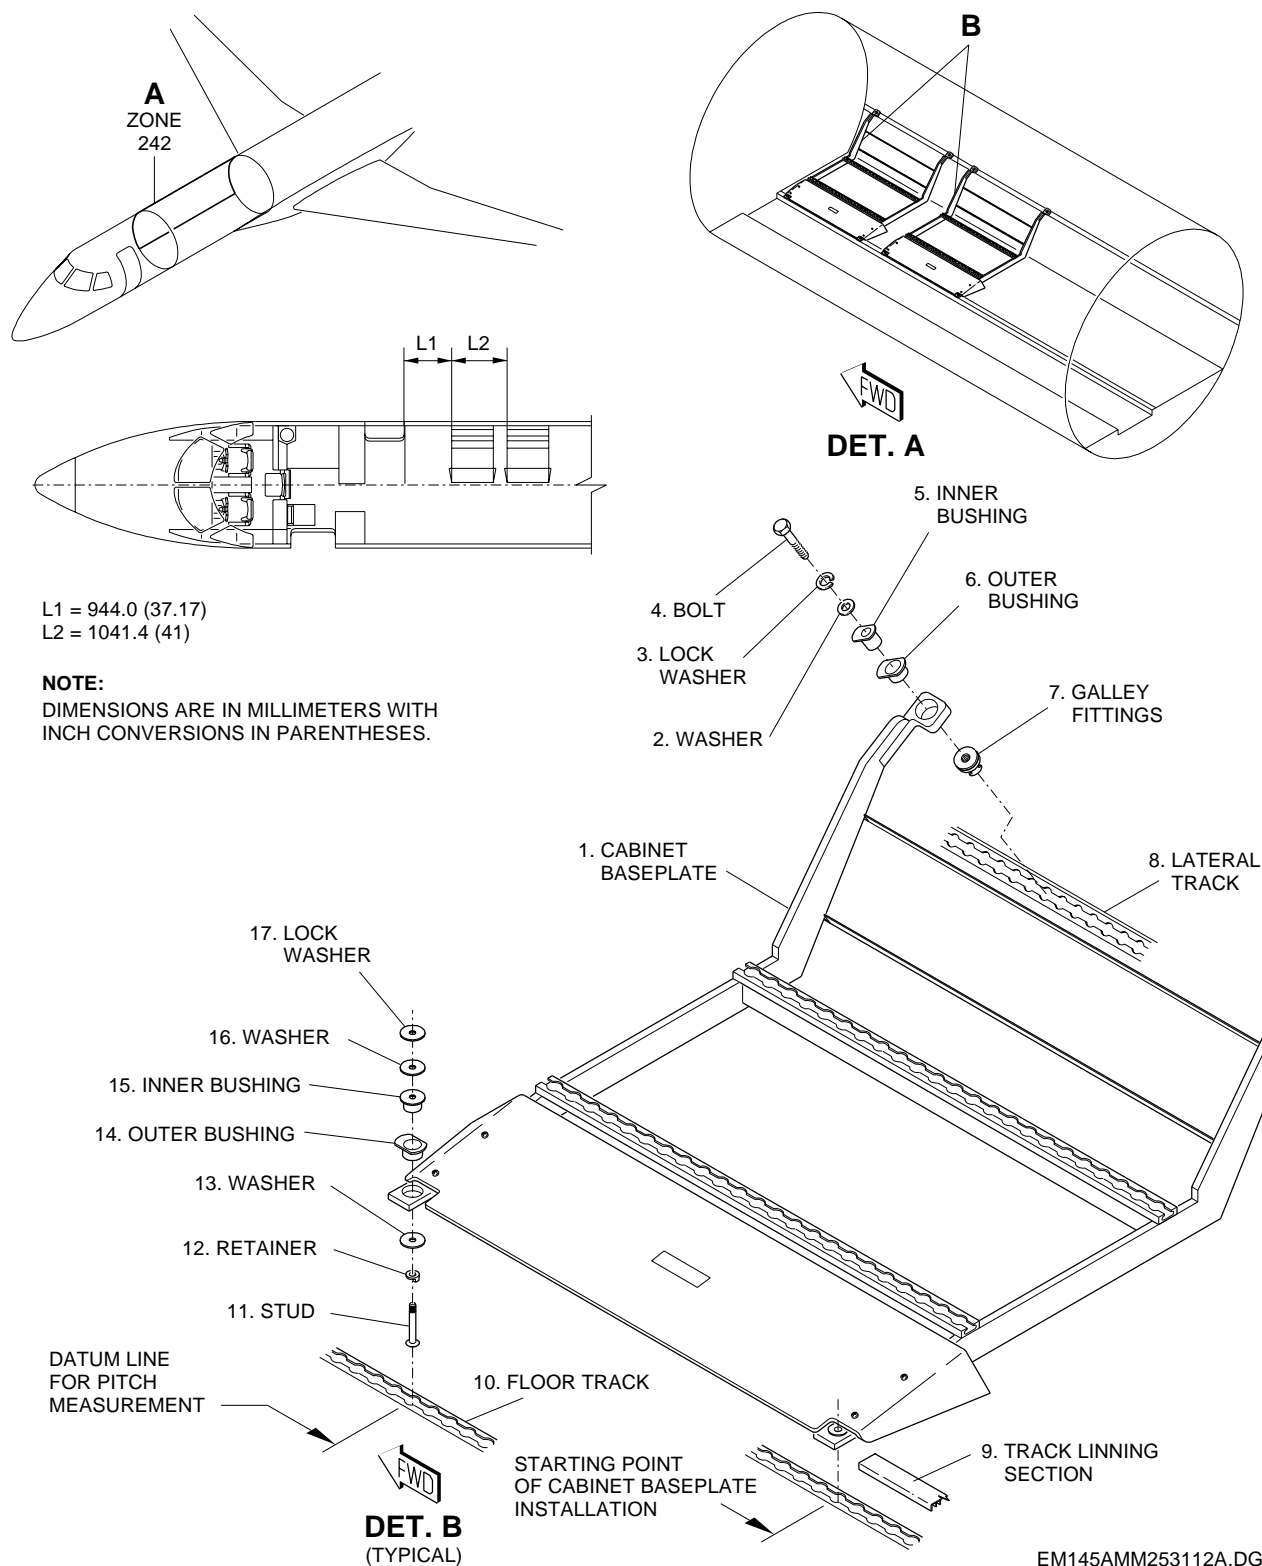

EM145AMM253112A.DGN

TASK 25-28-62-400-801-A

EFFECTIVITY: AIRCRAFT WITH MEDEVAC CONFIGURATION

### 3. CABINET BASEPLATE - INSTALLATION

#### A. General

(1) This task gives the instructions to install the cabinet baseplate.

#### B. References

REFERENCE	DESIGNATION
AMM TASK 25-28-04-200-801-A/600	-

#### C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
242		Passenger cabin

#### D. Tools and Equipment

Not Applicable

#### E. Auxiliary Items

Not Applicable

#### F. Consumable Materials

Not Applicable

#### G. Expandable Parts

Not Applicable

#### H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Passenger cabin

#### I. Installation (Figure 401)

SUBTASK 420-003-A

(1) Install the cabinet baseplate as follows:

- NOTE:**
- Make sure that the cabinet baseplate is back to the same location as that from which it was removed.
  - Start the installation of the cabinet baseplate from the first larger opening of the track slot and from the rear portion to the front portion. Refer to DET. B.
  - Obey the pitch of 1041.4 millimeters (41 inches) between the rows.
  - The pitch between the cabinet baseplates is measured from the front leg of one cabinet baseplate to the front leg of the subsequent cabinet baseplate.

- The distance between the first cabinet baseplate and the windscreen is measured from the front leg of the cabinet baseplate to the windscreen.
- (a) Install the galley fittings (7) at the lateral track (8).
  - (b) Install the retainers (12) and stud (11) at the floor track (10).
  - (c) Put the cabinet baseplate (1) in a position where the fittings align with the larger openings of the track slot.
  - (d) Push the cabinet baseplate (1) down and move it horizontally until it is in the correct position.
  - (e) Make sure that the cabinet baseplate (1) is in the correct position and attach the galley fittings (7), outer bushings (6), inner bushings (5), washers (2), lock washers (3), and bolts (4) to the lateral track (8).
  - (f) Attach the studs (11), retainers (12), washers (13), outer bushings (14), inner bushings (15), washers (16), and lock washers (17) that attach the cabinet baseplate (1) to the floor track (10).
  - (g) Install the track lining sections (9) as applicable.

J. Follow-on

*SUBTASK 842-003-A*

- (1) Do the visual check at the baseplates AMM TASK 25-28-04-200-801-A/600.